

# Accessories

Standard Accessories May Differ Depending On The Version.

MODEL	Battery Pack											
	EBP-33N	EBP-37N	EBP-62	EBP-45N	EBP-46N	EBP-50N	EBP-51N	EBP-56N	EBP-52N(S)	EBP-53N	EBP-54N	EBP-58N
	Compact 4.8V 650mAh Ni-CD	4.8V 700mAh Ni-CD	Ni-MH 4.8V 1200mAh	6.0V 700mAh Ni-CD	High power 9.6V 600mAh Ni-CD	Ni-MH 9.6V 700mAh	Long life Ni-MH 9.6V 1500mAh	Li-IO 7.4V 1000mAh	Thin type Ni-MH 3.6V 500mAh	High power Ni-MH 6.0V 500mAh	Long life Ni-MH 3.6V / 1500mAh	Li-IO 3.7V 600mAh
DJ-193~396	●*1											
DJ-493/496/446												
DJ-S41C/S800												
DJ-S40/S446												
DJ-S45												
DJ-C6/C7												Standard
DJ-V5				Standard *1	●*1							
DJ-V17/47/446												
DJ-596/593MkII						Standard	●	▲*2				
DJ-X3									●(S)		▲*3	
DJ-X7												Standard
DJ-X2000	●*1	●*1	Standard									

\* 1 : Ni-CD batteries are subject to RoHS restriction in EU. For DJ-X2000E use EBP-62/EDC-131E for spare. \* 2 : The low-battery icon on the display becomes inaccurate. \* 3 : Silver model is NOT available for DJ-X3

MODEL	Battery Pack						Trickle Charger		Charger Basket	A.C.Wall Charger		
	EBP-59	EBP-60	EBP-63	EBP-64	EBP-65	EBP-66	EDC-63/64Z	EDC-143	EDC-105	EDC-93/94	EDC-126/128	EDC-146/147/148
	Li-IO 3.7V 1000mAh	Li-IO 3.7V 1200mAh	Thin type Li-IO 7.4V 1100mAh	Long life Li-IO 7.4V 1600mAh	Ni-MH 7.2V 700mAh	Long life Ni-MH 7.2V 2000mAh	for ①②	for ①⑧	for ⑨~⑪	for ④~⑥	for ⑫	for ⑰⑱
DJ-193~396												
DJ-493/496/446												
DJ-S41C/S800	●											
DJ-S40/S446												
DJ-S45		●										
DJ-C6/C7												Standard
DJ-V5												Standard
DJ-V17/47/446			●	●	Standard	●		●				Standard
DJ-596/593MkII												Standard
DJ-X3	▲*3											
DJ-X7												Standard
DJ-X2000												

\* 4 : Basket only EDC-143R(Trickle charge) /144R(Rapid charge) available for multi-charger use.

MODEL	Rapid Charger										Cigar-Plug	
	EDC-97(E)	EDC-60/61	EDC-88	EDC-91	EDC-111(E)	EDC-104(E)	EDC-129(E)	EDC-133(E)	EDC-138	EDC-144	EDC-36	EDH-32
	for ⑥⑦	for ①②	for ①②⑥⑦	for ④⑤	for ⑧	for ⑨~⑪	for ⑬	for ③⑥⑦	for ⑭	for ⑮~⑱	Noise filter	Conversion 12/24V→6V
DJ-193~396	●		●		●			●			●	
DJ-493/496/446												
DJ-S41C/S800												
DJ-S40/S446												
DJ-S45												
DJ-C6/C7												●
DJ-V5					●*1							●
DJ-V17/47/446												●
DJ-596/593MkII	●		●		●		●					●
DJ-X3												●
DJ-X7												●
DJ-X2000		●*1	●*1					Standard				●

\* 5 : EDS-10 required.

Standard Accessories May Differ Depending On The Version.

MODEL	Earphone microphone					Earphone				PC Programming cable	Digital board
	EME-2	EME-4	EME-20	EME-21A	EME-24	EME-6	EME-18	EME-25	EME-26	ERW-4C	EJ-47U
	single plug	2-pin plug	compact	heavy-duty	curl-cord	3.5 φ monoral	2.5 φ stereo	curl-cord 2.5 φ	curl-cord 3.5 φ		for 10F1E where permitted
DJ-193~396		●	●	●		●			●		
DJ-493/496/446		●	●	●		●			●		
DJ-S41C/S800		●	●	●		●			●		
DJ-S40/S446		●	●	●		●			●		
DJ-S45		●	●	●		●			●		
DJ-C6/C7	●				●				●		
DJ-V5											
DJ-V17/47/446		▲*5	▲*5	▲*5		▲*5			▲*5		
DJ-596/593MkII		●	●	●		●			●		●
DJ-X3											●
DJ-X7											●
DJ-X2000											●

MODEL	Soft Case										Smart Trunk logic board	
	ESC-27	ESC-28	ESC-29	ESC-34	ESC-35	ESC-36	ESC-37	ESC-38	ESC-40	ESC-41	EJ-39D	EJ-38D
		for ①	for ③⑯	belt-pouch							where permitted	where permitted
DJ-193~396						●					▲*6	▲*7
DJ-493/496/446						●					▲*6	
DJ-S41C/S800	●											
DJ-S40/S446									●			
DJ-S45												
DJ-C6/C7												
DJ-V5												
DJ-V17/47/446												
DJ-596/593MkII												
DJ-X3												
DJ-X7												
DJ-X2000		●	●	●								

\* 6 : DJ-195R/196/396/496 only \* 7 : DJ-195 T/E only

MODEL	Dry cell case				
	EDH-16	EDH-29(C)	EDH-30	EDH-31(S)	EDH-34
				(S)Silver	
DJ-193~396					
DJ-493/496/446					
DJ-S41C/S800					
DJ-S40/S446				Standard	
DJ-S45					
DJ-C6/C7					
DJ-V5		●*8			
DJ-V17/47/446					
DJ-596/593MkII					
DJ-X3				Standard(S)	
DJ-X7					
DJ-X2000	●				

\* 8 : EDH-29C for clear-case version

MODEL	Cigar-Plug	EXTERNAL DC supply cable	Miscellaneous cable		Speaker microphone				Tie-pin microphone	Headset with VOX		
	EDH-33	EDC-43	EDC-37	EDS-10	EDS-11	EMS-47	EMS-50	EMS-59	EMS-60	EME-15A	EME-12A	EME-13A
	Conversion 12/24V→5.5V	for charging		Mic/SP plug conversion	clone	with Volume-control	miniature	2-pin plug	single plug	with VOX/earphone	Speaker type	Earphone type
DJ-193~396		●	●			●		●		●	●	●
DJ-493/496/446		●	●			●		●		●	●	●
DJ-S41C/S800		●	●			●		●		●	●	●
DJ-S40/S446		●	●			●		●		●	●	●
DJ-S45						●		●		●	●	●
DJ-C6/C7							●		●			
DJ-V5												
DJ-V17/47/446												
DJ-596/593MkII						▲*5		▲*5		▲*5	▲*5	▲*5
DJ-X3												
DJ-X7												
DJ-X2000												

\* 5 : EDS-10 required.

MODEL	Spare Antenna				Belt clip
	Standard	high band	PIVOT	FIXED	Standard
		For TA2 Versions			
DJ-193~196	EA-57	EA-58			EBC-17
DJ-396	EA-103				EBC-17
DJ-296	EA-79				EBC-17
DJ-493/496	EA-87	EA-88			EBC-17
DJ-446				EA-84	EBC-17
DJ-S41C/S800			EA-50 / EA-119		EBC-16
DJ-S40C	EA-70				EBC-18
DJ-S446			EA-99		EBC-18
DJ-S45	T/E=EA-139		EA-99		EBC-18
DJ-C6	EA-129			L=EA-134 / S=EA-135	EBC-21
DJ-C7	EA-116				(N/A) *9
DJ-V5	EA-70				(N/A) *9
DJ-V17/47/446	V17=EA-141	V47=EA-143			EBC-17
DJ-596/593MkII	EA-98			V446=EA-149	EBC-22
DJ-X3	EA-81				EBC-17
DJ-X7	EA-133				EBC-18
DJ-X2000	EA-59Z / 94				(N/A) *9
					EBC-3

\* 9 : Use ESC-34 belt-pouch

**About IPX7 symbol**  
Water-resistant

The IEC 60529 IPX7 is an European system of test specification standards for classifying the degrees of protection provided by the enc